

## JITTER

\*\*\*\*\*

The 'DELAY'-module too provides the powerfull 'JITTER'-function. To install the 'JITTER' please do the following: Set the 'DELAY' to 40ms (33.3ms) and on the 'CPU'-module advance the 'START-TIME' by one frame. This will result in correct timing again when the 'JITTER'-knob is in zero position.

But now the clock signals can be stochastically delayed and advanced by opening the 'JITTER'-knob.