
Can't get out of Demo Mode

Posted by Human_Nature - 2013/06/27 22:00

Help i Can't get out of demo mode, I've tried inserting the CF card. Reseting back to Factory. upgrading to latest OS

If i enter the CF card Demo mode is still active, pressing exit or does't work, powering off and on still it goes back into demo mode

Help this things just arrived and my customer experience is going downhill fast

=====

Re:Can't get out of Demo Mode

Posted by Ihatederekreed - 2013/06/27 22:08

Start a new project?

=====

Re:Can't get out of Demo Mode

Posted by Human_Nature - 2013/06/27 22:11

Not available in Demo Mode

=====

Re:Can't get out of Demo Mode

Posted by Human_Nature - 2013/06/27 22:21

If i insert the CF card it sticks on a screen that displays

DEMO MODE

Playback>static =01-09

None of the numbered buttons respond, but if i press play / Function / Pattern / Bank / Record / The Animated Giff shows again and rests on the page as described above

=====

Re:Can't get out of Demo Mode

Posted by Ihatederekreed - 2013/06/28 00:03

I've never seen "demo mode" as I bought mine used with a blank flash card.

Does function+mixer get you to the global settings?

=====

Re:Can't get out of Demo Mode

Posted by anderson - 2013/06/28 04:05

maybe YES button being pressed/stucked on start up?

=====

Re:Can't get out of Demo Mode

Posted by GovernorSilver - 2013/06/28 06:15

This is what I did to get out of Demo Mode:

1. Turned off Octatrack
2. Plugged in CF card (you did that too - good)
3. Turned on Octatrack
- 4 Press + to open Project Menu
5. Select CHANGE
6. Select
7. Name your new Project and save

=====

Re:Can't get out of Demo Mode

Posted by Nein - 2013/06/28 06:58

Not had to consider this for a long time but don't you just mount a new set ?

=====

Re:Can't get out of Demo Mode

Posted by Human_Nature - 2013/09/09 01:23

FYI the issue was a faulty unit now replaced

=====

Re:Can't get out of Demo Mode

Posted by 5id - 2013/09/09 04:26

Human_Nature wrote:

FYI the issue was a faulty unit now replaced

Glad you got sorted out man, stuck in demo mode must of been a nightmare, that vocal sample in one of those preset patterns did my tits in for the first couple of days so i just avoided that pattern. Everything was going ok then i did some key combo and the OT stopped dead, winked at me and went into arranger mode with an overdose of that vocal sample :oof:

Fun times :P

=====

Re:Can't get out of Demo Mode

Posted by jonah - 2013/09/09 14:28

glad you got it sorted!

Ihatederekreed wrote:

I've never seen "demo mode" as I bought mine used with a blank flash card.

Does function+mixer get you to the global settings?

the wonders/horrors of demo mode live in all octatracks! Some kind of flash RAM? I think it'd be kinda useful if as some point we could make our own "demos". I've misplaced my CF card because I don't like to move the OT with it in it and it'd be nice not to duplicate the same files on CF cards.

=====